

Using BeatStep as a slave in Live

In order to synchronize your BeatStep with Live first press 'EXT SYNC' button on your controller.



Preferences setup in Live

- Go to 'Preferences' then click on 'MIDI Sync'
- Input TRACK should be enable on BeatStep device
- Output SYNC should be enable on BeatStep device



Hitting play in Live should now launch BeatStep sequencer.